

# **Product Specification**

Туре	DC Forward Curved Centrifugal Fan
Model	BE-F140B-EC-00



#### **Basic Parameters**


Phase	~	1
Rated Voltage	VAC	48
Frequency	Hz	50/60
Rated Speed	RPM	1900
Max. Input Power	W	85
Max. Input Current	А	3.6
Sound level	dBA	61
Certification	~	CE、RoHS
Min. Ambient Temperature	°C	-25
Max. Ambient Temperature	C	60

#### **Technical Features**


Dimensions	140*140*72 mm	
Material of Impeller	Metal	
Direction of Rotation	Clockwise, Seen on Rotor	
Surface of Rotor	Plastic Spraying	
Type of Protection	IP55	
Insulation Class	В	
Operation Mode	S1	
Bearing Type	Ball Bearing	
	Locked Rotor Protection,	
Motor Protection	Thermal Protection,	
	Less and Excessive Voltage	
	Protection, Overcurrent Protection,	
	Soft Start	
Length of Cable	500±20mm	
RoHS	All Material According with RoHS	
Min./Max. Humidity	5% - 90% RH	
Motor Type	External Rotor EC Motor	
Deviation of Impeller in Axial Direction	≤ 0.5 mm	
Deviation of Impeller in Radial Direction	≤ 0.5 mm	



#### Air Performance

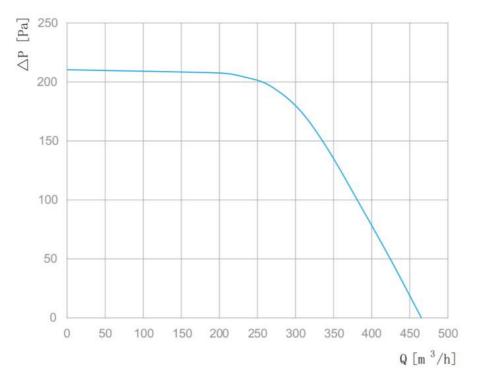


## **Outline Drawing**

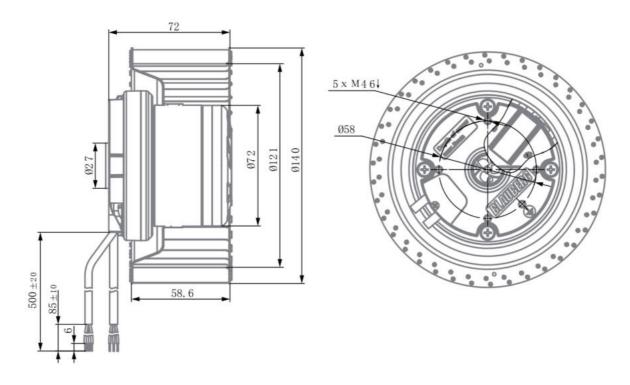



#### Wiring Diagram

	Connection	Color	Function	Line
U1		Red	Power Line (Positive Pole)	
U2		Blue	GND	Power Line
U3	0-10V	Yellow	0 - 10V & PWM Compatible	
			Line	
U4	FG	White	RPM Output Signal Line	
			2 Pulses/roll	

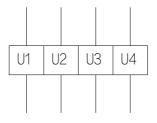

### Additional Notes

1. The power line and control line of the fan should be connected in strict accordance with the wiring diagram to prevent the fan from burning out;

2. Do not connect the white signal wire directly to the red signal wire or the external DC power supply;

3. If the fan does not work after starting, please check the input voltage of the speed regulation, which may be improperly connected. To prevent hand or other personal injury caused by sudden start of the fan; Do not touch the impeller or rotor after electrifying;

4. It takes a few seconds for the fan to start after power on. In order to prevent personal injury, do not touch the impeller or rotor under the condition of electrifying or low speed operating;

5. Persons lacking physical, mental or sensory abilities and appropriate practical experience or expertise cannot use the fan unless directed by a person responsible for its safety. Keep out of reach of children.6. If the power wire is damaged, the manufacturer must replace the power cord;

7. As a part of the fan, the motor cannot be used alone without impeller or load;

8. After the product packaging has been disassembled, it should be repackaged if it needs to be kept in storage. The product shall be stored in a clean, well-ventilated warehouse with ambient temperature of  $-40^{\circ}$ C  $\rightarrow +80^{\circ}$ C, relative humidity of no more than 95%, no corrosive gases in the air, and 15cm above the ground;

9. Please read this technical specification carefully before use;